

## קודי תקלה תקשורת U Code

U0000 שמור רזרבי  
U0001 High Speed CAN Communication Bus  
U0002 High Speed CAN Communication Bus Performance  
U0003 High Speed CAN Communication Bus (+) Open  
U0004 High Speed CAN Communication Bus (+) Low  
U0005 High Speed CAN Communication Bus (+) High  
U0006 High Speed CAN Communication Bus (-) Open  
U0007 High Speed CAN Communication Bus (-) Low  
U0008 High Speed CAN Communication Bus (-) High  
U0009 High Speed CAN Communication Bus (-) shorted to Bus (+)  
U0010 Medium Speed CAN Communication Bus  
U0011 Medium Speed CAN Communication Bus Performance  
U0012 Medium Speed CAN Communication Bus (+) Open  
U0013 Medium Speed CAN Communication Bus (+) Low  
U0014 Medium Speed CAN Communication Bus (+) High  
U0015 Medium Speed CAN Communication Bus (-) Open  
U0016 Medium Speed CAN Communication Bus (-) Low  
U0017 Medium Speed CAN Communication Bus (-) High  
U0018 Medium Speed CAN Communication Bus (-) shorted to Bus (+)  
U0019 Low Speed CAN Communication Bus  
U0020 Low Speed CAN Communication Bus Performance  
U0021 Low Speed CAN Communication Bus (+) Open  
U0022 Low Speed CAN Communication Bus (+) Low  
U0023 Low Speed CAN Communication Bus (+) High  
U0024 Low Speed CAN Communication Bus (-) Open  
U0025 Low Speed CAN Communication Bus (-) Low  
U0026 Low Speed CAN Communication Bus (-) High  
U0027 Low Speed CAN Communication Bus (-) shorted to Bus (+)  
U0028 Vehicle Communication Bus A  
U0029 Vehicle Communication Bus A Performance  
U0030 Vehicle Communication Bus A (+) Open  
U0031 Vehicle Communication Bus A (+) Low  
U0032 Vehicle Communication Bus A (+) High  
U0033 Vehicle Communication Bus A (-) Open  
U0034 Vehicle Communication Bus A (-) Low  
U0035 Vehicle Communication Bus A (-) High  
U0036 Vehicle Communication Bus A (-) shorted to Bus A (+)  
U0037 Vehicle Communication Bus B  
U0038 Vehicle Communication Bus B Performance  
U0039 Vehicle Communication Bus B (+) Open  
U0040 Vehicle Communication Bus B (+) Low  
U0041 Vehicle Communication Bus B (+) High  
U0042 Vehicle Communication Bus B (-) Open  
U0043 Vehicle Communication Bus B (-) Low  
U0044 Vehicle Communication Bus B (-) High

U0045 Vehicle Communication Bus B (-) shorted to Bus B (+)  
U0046 Vehicle Communication Bus C  
U0047 Vehicle Communication Bus C Performance  
U0048 Vehicle Communication Bus C (+) Open  
U0049 Vehicle Communication Bus C (+) Low  
U0050 Vehicle Communication Bus C (+) High  
U0051 Vehicle Communication Bus C (-) Open  
U0052 Vehicle Communication Bus C (-) Low  
U0053 Vehicle Communication Bus C (-) High  
U0054 Vehicle Communication Bus C (-) shorted to Bus C (+)  
U0055 Vehicle Communication Bus D  
U0056 Vehicle Communication Bus D Performance  
U0057 Vehicle Communication Bus D (+) Open  
U0058 Vehicle Communication Bus D (+) Low  
U0059 Vehicle Communication Bus D (+) High  
U0060 Vehicle Communication Bus D (-) Open  
U0061 Vehicle Communication Bus D (-) Low  
U0062 Vehicle Communication Bus D (-) High  
U0063 Vehicle Communication Bus D (-) shorted to Bus D (+)  
U0064 Vehicle Communication Bus E  
U0065 Vehicle Communication Bus E Performance  
U0066 Vehicle Communication Bus E (+) Open  
U0067 Vehicle Communication Bus E (+) Low  
U0068 Vehicle Communication Bus E (+) High  
U0069 Vehicle Communication Bus E (-) Open  
U0070 Vehicle Communication Bus E (-) Low  
U0071 Vehicle Communication Bus E (-) High  
U0072 Vehicle Communication Bus E (-) shorted to Bus E (+)  
U0073 Control Module Communication Bus "A" Off  
U0074 Control Module Communication Bus "B" Off  
U0075 – U00FF שמור רזרבי

U0100 Lost Communication With ECM/PCM "A"  
U0101 Lost Communication with TCM  
U0102 Lost Communication with Transfer Case Control Module  
U0103 Lost Communication With Gear Shift Control Module "A"  
U0104 Lost Communication With Cruise Control Module  
U0105 Lost Communication With Fuel Injector Control Module  
U0106 Lost Communication With Glow Plug Control Module  
U0107 Lost Communication With Throttle Actuator Control Module  
U0108 Lost Communication With Alternative Fuel Control Module  
U0109 Lost Communication With Fuel Pump Control Module  
U010A Lost Communication With Exhaust Gas Recirculation Control Module "A"  
U010B Lost Communication With Exhaust Gas Recirculation Control Module "B"  
U010C Lost Communication With Turbocharger/Supercharger Control Module "A"  
U010D Lost Communication With Turbocharger/Supercharger Control Module "B"  
U010E Lost Communication With Reductant Control Module  
U010F Lost Communication With Air Conditioning Control Module  
U0110 Lost Communication With Drive Motor Control Module "A"

U0111 Lost Communication With Battery Energy Control Module "A"  
U0112 Lost Communication With Battery Energy Control Module "B"  
U0113 Lost Communication With Emissions Critical Control Information  
U0114 Lost Communication With Four-Wheel Drive Clutch Control Module  
U0115 Lost Communication With ECM/PCM "B"  
U0116 Lost Communication With Coolant Temperature Control Module  
U0117 Lost Communication With PTO Control Module  
U0118 Lost Communication With Fuel Additive Control Module  
U0119 Lost Communication With Fuel Cell Control Module  
U011A Lost Communication With Exhaust Gas Sensor Module  
U011B Lost Communication With Rocker Arm Control Module "A"  
U011C Lost Communication With Rocker Arm Control Module "B"  
U011D Lost Communication With All Wheel Drive Control Module  
U0120 Lost Communication With Starter / Generator Control Module  
U0121 Lost Communication With Anti-Lock Brake System (ABS) Control Module  
U0122 Lost Communication With Vehicle Dynamics Control Module  
U0123 Lost Communication With Yaw Rate Sensor Module  
U0124 Lost Communication With Lateral Acceleration Sensor Module  
U0125 Lost Communication With Multi-axis Acceleration Sensor Module  
U0126 Lost Communication With Steering Angle Sensor Module  
U0127 Lost Communication With Tire Pressure Monitor Module  
U0128 Lost Communication With Park Brake Control Module  
U0129 Lost Communication With Brake System Control Module  
U0130 Lost Communication With Steering Effort Control Module  
U0131 Lost Communication With Power Steering Control Module  
U0132 Lost Communication With Suspension Control Module "A"  
U0133 Lost Communication With Active Roll Control Module  
U0134 Lost Communication With Power Steering Control Module Rear  
U0135 Lost Communication With Differential Control Module Front  
U0136 Lost Communication With Differential Control Module Rear  
U0137 Lost Communication With Trailer Brake Control Module  
U0138 Lost Communication With All Terrain Control Module  
U0139 Lost Communication With Suspension Control Module "B"  
U0140 Lost Communication With Body Control Module  
U0141 Lost Communication With Body Control Module "A"  
U0142 Lost Communication With Body Control Module "B"  
U0143 Lost Communication With Body Control Module "C"  
U0144 Lost Communication With Body Control Module "D"  
U0145 Lost Communication With Body Control Module "E"  
U0146 Lost Communication With Gateway "A"  
U0147 Lost Communication With Gateway "B"  
U0148 Lost Communication With Gateway "C"  
U0149 Lost Communication With Gateway "D"  
U0150 Lost Communication With Gateway "E"  
U0151 Lost Communication With Restraints Control Module  
U0152 Lost Communication With Side Restraints Control Module Left  
U0153 Lost Communication With Side Restraints Control Module Right  
U0154 Lost Communication With Restraints Occupant Classification System Module  
U0155 Lost Communication With Instrument Panel Cluster (IPC) Control Module

U0156 Lost Communication With Information Center "A"  
U0157 Lost Communication With Information Center "B"  
U0158 Lost Communication With Head Up Display  
U0159 Lost Communication With Parking Assist Control Module "A"  
U0160 Lost Communication With Audible Alert Control Module  
U0161 Lost Communication With Compass Module  
U0162 Lost Communication With Navigation Display Module  
U0163 Lost Communication With Navigation Control Module  
U0164 Lost Communication With HVAC Control Module  
U0165 Lost Communication With HVAC Control Module Rear  
U0166 Lost Communication With Auxiliary Heater Control Module  
U0167 Lost Communication With Vehicle Immobilizer Control Module  
U0168 Lost Communication With Vehicle Security Control Module  
U0169 Lost Communication With Sunroof Control Module  
U016A Lost Communication With Global Positioning System Module  
U0170 Lost Communication With "Restraints System Sensor A"  
U0171 Lost Communication With "Restraints System Sensor B"  
U0172 Lost Communication With "Restraints System Sensor C"  
U0173 Lost Communication With "Restraints System Sensor D"  
U0174 Lost Communication With "Restraints System Sensor E"  
U0175 Lost Communication With "Restraints System Sensor F"  
U0176 Lost Communication With "Restraints System Sensor G"  
U0177 Lost Communication With "Restraints System Sensor H"  
U0178 Lost Communication With "Restraints System Sensor I"  
U0179 Lost Communication With "Restraints System Sensor J"  
U017A Lost Communication With "Restraints System Sensor K"  
U017B Lost Communication With "Restraints System Sensor L"  
U017C Lost Communication With "Restraints System Sensor M"  
U017D Lost Communication With "Restraints System Sensor N"  
U017E Lost Communication With Seatbelt Pretensioner Module "A"  
U017F Lost Communication With Seatbelt Pretensioner Module "B"  
U0180 Lost Communication With Automatic Lighting Control Module  
U0181 Lost Communication With Headlamp Leveling Control Module  
U0182 Lost Communication With Lighting Control Module Front  
U0183 Lost Communication With Lighting Control Module Rear "A"  
U0184 Lost Communication With Radio  
U0185 Lost Communication With Antenna Control Module  
U0186 Lost Communication With Audio Amplifier "A"  
U0187 Lost Communication With Digital Disc Player/Changer Module "A"  
U0188 Lost Communication With Digital Disc Player/Changer Module "B"  
U0189 Lost Communication With Digital Disc Player/Changer Module "C"  
U0190 Lost Communication With Digital Disc Player/Changer Module "D"  
U0191 Lost Communication With Television  
U0192 Lost Communication With Personal Computer  
U0193 Lost Communication With "Digital Audio Control Module A"  
U0194 Lost Communication With "Digital Audio Control Module B"  
U0195 Lost Communication With Subscription Entertainment Receiver Module  
U0196 Lost Communication With Entertainment Control Module Rear "A"  
U0197 Lost Communication With Telephone Control Module

U0198 Lost Communication With Telematic Control Module

U0199 Lost Communication With "Door Control Module A"

U019A – U01FF שמור רזרבי

U0200 Lost Communication With "Door Control Module B"

U0201 Lost Communication With "Door Control Module C"

U0202 Lost Communication With "Door Control Module D"

U0203 Lost Communication With "Door Control Module E"

U0204 Lost Communication With "Door Control Module F"

U0205 Lost Communication With "Door Control Module G"

U0206 Lost Communication With Folding Top Control Module

U0207 Lost Communication With Moveable Roof Control Module

U0208 Lost Communication With "Seat Control Module A"

U0209 Lost Communication With "Seat Control Module B"

U0210 Lost Communication With "Seat Control Module C"

U0211 Lost Communication With "Seat Control Module D"

U0212 Lost Communication With Steering Column Control Module

U0213 Lost Communication With Mirror Control Module

U0214 Lost Communication With Remote Function Actuation

U0215 Lost Communication With "Door Switch A"

U0216 Lost Communication With "Door Switch B"

U0217 Lost Communication With "Door Switch C"

U0218 Lost Communication With "Door Switch D"

U0219 Lost Communication With "Door Switch E"

U0220 Lost Communication With "Door Switch F"

U0221 Lost Communication With "Door Switch G"

U0222 Lost Communication With "Door Window Motor A"

U0223 Lost Communication With "Door Window Motor B"

U0224 Lost Communication With "Door Window Motor C"

U0225 Lost Communication With "Door Window Motor D"

U0226 Lost Communication With "Door Window Motor E"

U0227 Lost Communication With "Door Window Motor F"

U0228 Lost Communication With "Door Window Motor G"

U0229 Lost Communication With Heated Steering Wheel Module

U0230 Lost Communication With Rear Gate Module

U0231 Lost Communication With Rain Sensing Module

U0232 Lost Communication With Side Obstacle Detection Control Module Left

U0233 Lost Communication With Side Obstacle Detection Control Module Right

U0234 Lost Communication With Convenience Recall Module

U0235 Lost Communication With Cruise Control Front Distance Range Sensor Single Sensor or Center

U0236 Lost Communication With Column Lock Module

U0237 Lost Communication With "Digital Audio Control Module C"

U0238 Lost Communication With "Digital Audio Control Module D"

U0239 Lost Communication With Entrapment Control Module "A"

U023A Lost Communication With Image Processing Module "A"

U023B Lost Communication With Image Processing Module "B"

U023C Lost Communication With Image Processing Module "C"

U023D Lost Communication With Cruise Control Front Distance Range Sensor Left

U023E Lost Communication With Cruise Control Front Distance Range Sensor Right  
U0240 Lost Communication With Entrapment Control Module "B"  
U0241 Lost Communication With Headlamp Control Module "A"  
U0242 Lost Communication With Headlamp Control Module "B"  
U0243 Lost Communication With Parking Assist Control Module "B"  
U0244 Lost Communication With Running Board Control Module "A"  
U0245 Lost Communication With Entertainment Control Module Front  
U0246 Lost Communication With "Seat Control Module E"  
U0247 Lost Communication With "Seat Control Module F"  
U0248 Lost Communication With Remote Accessory Module  
U0249 Lost Communication With Entertainment Control Module Rear "B"  
U024A Lost Communication With Interior Lighting Control Module  
U0250 Lost Communication With Impact Classification System Module  
U0251 Lost Communication With Running Board Control Module "B"  
U0252 Lost Communication With Lighting Control Module Rear "B"  
U0253 Lost Communication With Accessory Protocol Interface Module  
U0254 Lost Communication With Remote Start Module  
U0255 Lost Communication With Front Display Interface Module  
U0256 Lost Communication With Front Controls Interface Module "A"  
U0257 Lost Communication With Front Controls/Display Interface Module  
U0258 Lost Communication With Radio Transceiver  
U0259 Lost Communication With Special Purpose Vehicle Control Module "A"  
U025A Lost Communication With Special Purpose Vehicle Control Module "B"  
U025B Lost Communication With Special Purpose Vehicle Control Module "C"  
U025C Lost Communication With Special Purpose Vehicle Control Module "D"  
U025D Lost Communication With Front Controls Interface Module "B"  
U0260 Lost Communication With Seat Control Switch Module "A"  
U0261 Lost Communication With Seat Control Switch Module "B"  
U0262 Lost Communication With Audio Amplifier "B"  
U0263 Lost Communication With Speech Recognition Module  
U0264 Lost Communication With Camera Module Rear  
U0286 Lost Communication With Radiator Anti Tamper Device  
U0287 Lost Communication With Transmission Fluid Pump Module  
U0288 Lost Communication With DC to AC Converter Control Module "A"  
U0289 Lost Communication With DC to AC Converter Control Module "B"  
U0291 Lost Communication With Gear Shift Control Module "B"  
U0292 Lost Communication With Drive Motor Control Module "B"  
U0293 Lost Communication With Hybrid Powertrain Control Module  
U0294 Lost Communication With Powertrain Control Monitor Module  
U0295 Lost Communication With AC to AC Converter Control Module  
U0296 Lost Communication With AC to DC Converter Control Module "A"  
U0297 Lost Communication With AC to DC Converter Control Module "B"  
U0298 Lost Communication With DC to DC Converter Control Module "A"  
U0299 Lost Communication With DC to DC Converter Control Module "B"  
U029A Lost Communication With Hybrid Battery Pack Sensor Module  
U029B Lost Communication With Drive Motor Control Module "C"  
U029C Lost Communication With Drive Motor Control Module "D"  
U029D Lost Communication With NOX Sensor "A"  
U029E Lost Communication With NOX Sensor "B"

U029F – U02FF שמור רזרבי

- U0300 Internal Control Module Software Incompatibility
- U0301 Software Incompatibility With ECM/PCM
- U0302 Software Incompatibility With Transmission Control Module
- U0303 Software Incompatibility With Transfer Case Control Module
- U0304 Software Incompatibility With Gear Shift Control Module "A"
- U0305 Software Incompatibility With Cruise Control Module
- U0306 Software Incompatibility With Fuel Injector Control Module
- U0307 Software Incompatibility With Glow Plug Control Module
- U0308 Software Incompatibility With Throttle Actuator Control Module
- U0309 Software Incompatibility With Alternative Fuel Control Module
- U0310 Software Incompatibility With Fuel Pump Control Module
- U0311 Software Incompatibility With Drive Motor Control Module
- U0312 Software Incompatibility With Battery Energy Control Module A
- U0313 Software Incompatibility With Battery Energy Control Module B
- U0314 Software Incompatibility With Four-Wheel Drive Clutch Control Module
- U0315 Software Incompatibility With Anti-Lock Brake System Control Module
- U0316 Software Incompatibility With Vehicle Dynamics Control Module
- U0317 Software Incompatibility With Park Brake Control Module
- U0318 Software Incompatibility With Brake System Control Module
- U0319 Software Incompatibility With Steering Effort Control Module
- U0320 Software Incompatibility With Power Steering Control Module
- U0321 Software Incompatibility With Suspension Control Module "A"
- U0322 Software Incompatibility With Body Control Module
- U0323 Software Incompatibility With Instrument Panel Control Module
- U0324 Software Incompatibility With HVAC Control Module
- U0325 Software Incompatibility With Auxiliary Heater Control Module
- U0326 Software Incompatibility With Vehicle Immobilizer Control Module
- U0327 Software Incompatibility With Vehicle Security Control Module
- U0328 Software Incompatibility With Steering Angle Sensor Module
- U0329 Software Incompatibility With Steering Column Control Module
- U0330 Software Incompatibility With Tire Pressure Monitor Module
- U0331 Software Incompatibility With Body Control Module "A"
- U0332 Software Incompatibility With Multi-axis Acceleration Sensor Module
- U0333 Software Incompatibility With Gear Shift Control Module "B"
- U0334 Software Incompatibility With Radio
- U0335 Software Incompatibility With Hybrid Battery Pack Sensor Module
- U0336 Software Incompatibility with Restraints Control Module
- U0337 – U03FF שמור רזרבי

U0400 Invalid Data Received

- U0401 Invalid Data Received From ECM/PCM "A"
- U0402 Invalid Data Received From TCM
- U0403 Invalid Data Received From Transfer Case Control Module
- U0404 Invalid Data Received From Gear Shift Control Module "A"
- U0405 Invalid Data Received From Cruise Control Module
- U0406 Invalid Data Received From Fuel Injector Control Module
- U0407 Invalid Data Received From Glow Plug Control Module
- U0408 Invalid Data Received From Throttle Actuator Control Module

U0409 Invalid Data Received From Alternative Fuel Control Module  
U040A Invalid Data Received From Air Conditioning Control Module  
U040B Invalid Data Received From Exhaust Gas Recirculation Control Module "A"  
U040C Invalid Data Received From Exhaust Gas Recirculation Control Module "B"  
U040D Invalid Data Received From Turbocharger/Supercharger Control Module "A"  
U040E Invalid Data Received From Turbocharger/Supercharger Control Module "B"  
U040F Invalid Data Received From Reductant Control Module  
U0410 Invalid Data Received From Fuel Pump Control Module  
U0411 Invalid Data Received From Drive Motor Control Module "A"  
U0412 Invalid Data Received From Battery Energy Control Module "A"  
U0413 Invalid Data Received From Battery Energy Control Module "B"  
U0414 Invalid Data Received From Four-Wheel Drive Clutch Control Module  
U0415 Invalid Data Received From Anti-Lock Brake System (ABS) Control Module  
U0416 Invalid Data Received From Vehicle Dynamics Control Module  
U0417 Invalid Data Received From Park Brake Control Module  
U0418 Invalid Data Received From Brake System Control Module  
U0419 Invalid Data Received From Steering Effort Control Module  
U041B Invalid Data Received From Exhaust Gas Sensor Module  
U041C Invalid Data Received From Rocker Arm Control Module "A"  
U041D Invalid Data Received From Rocker Arm Control Module "B"  
U041E Invalid Data Received From All Wheel Drive Control Module  
U0420 Invalid Data Received From Power Steering Control Module  
U0421 Invalid Data Received From Suspension Control Module "A"  
U0422 Invalid Data Received From Body Control Module  
U0423 Invalid Data Received From Instrument Panel Cluster Control  
U0424 Invalid Data Received From HVAC Control Module  
U0425 Invalid Data Received From Auxiliary Heater Control Module  
U0426 Invalid Data Received From Vehicle Immobilizer Control Module  
U0427 Invalid Data Received From Vehicle Security Control Module  
U0428 Invalid Data Received From Steering Angle Sensor Module  
U0429 Invalid Data Received From Steering Column Control Module  
U0430 Invalid Data Received From Tire Pressure Monitor Module  
U0431 Invalid Data Received From Body Control Module "A"  
U0432 Invalid Data Received From Multi-axis Acceleration Sensor Module  
U0433 Invalid Data Received From Cruise Control Front Distance Range Sensor Single Sensor or Center  
U0434 Invalid Data Received From Active Roll Control Module  
U0435 Invalid Data Received From Power Steering Control Module Rear  
U0436 Invalid Data Received From Differential Control Module Front  
U0437 Invalid Data Received From Differential Control Module Rear  
U0438 Invalid Data Received From Trailer Brake Control Module  
U0439 Invalid Data Received From All Terrain Control Module  
U043A Invalid Data Received From Suspension Control Module "B"  
U043B Invalid Data Received From Cruise Control Front Distance Range Sensor Left  
U043C Invalid Data Received From Cruise Control Front Distance Range Sensor Right  
U0441 Invalid Data Received From Emissions Critical Control Information  
U0442 Invalid Data Received From ECM/PCM "B"  
U0443 Invalid Data Received From Body Control Module "B"  
U0444 Invalid Data Received From Body Control Module "C"



U0445 Invalid Data Received From Body Control Module "D"  
U0446 Invalid Data Received From Body Control Module "E"  
U0447 Invalid Data Received From Gateway "A"  
U0448 Invalid Data Received From Gateway "B"  
U0449 Invalid Data Received From Gateway "C"  
U044A Invalid Data Received From Gateway "D"  
U0451 Invalid Data Received From Gateway "E"  
U0452 Invalid Data Received From Restraints Control Module  
U0453 Invalid Data Received From Side Restraints Control Module Left  
U0454 Invalid Data Received From Side Restraints Control Module Right  
U0455 Invalid Data Received From Restraints Occupant Classification System Module  
U0456 Invalid Data Received From Coolant Temperature Control Module  
U0457 Invalid Data Received From Information Center "A"  
U0458 Invalid Data Received From Information Center "B"  
U0459 Invalid Data Received From Head Up Display  
U045A Invalid Data Received From Parking Assist Control Module "A"  
U0461 Invalid Data Received From Audible Alert Control Module  
U0462 Invalid Data Received From Compass Module  
U0463 Invalid Data Received From Navigation Display Module  
U0464 Invalid Data Received From Navigation Control Module  
U0465 Invalid Data Received From PTO Control Module  
U0466 Invalid Data Received From HVAC Control Module Rear  
U0467 Invalid Data Received From Fuel Additive Control Module  
U0468 Invalid Data Received From Fuel Cell Control Module  
U0469 Invalid Data Received From Starter / Generator Control Module  
U046A Invalid Data Received From Sunroof Control Module  
U046B Invalid Data Received From Global Positioning System Module  
U0471 Invalid Data Received From "Restraints System Sensor A"  
U0472 Invalid Data Received From "Restraints System Sensor B"  
U0473 Invalid Data Received From "Restraints System Sensor C"  
U0474 Invalid Data Received From "Restraints System Sensor D"  
U0475 Invalid Data Received From "Restraints System Sensor E"  
U0476 Invalid Data Received From "Restraints System Sensor F"  
U0477 Invalid Data Received From "Restraints System Sensor G"  
U0478 Invalid Data Received From "Restraints System Sensor H"  
U0479 Invalid Data Received From "Restraints System Sensor I"  
U047A Invalid Data Received From "Restraints System Sensor J"  
U047B Invalid Data Received From "Restraints System Sensor K"  
U047C Invalid Data Received From "Restraints System Sensor L"  
U047D Invalid Data Received From "Restraints System Sensor M"  
U047E Invalid Data Received From "Restraints System Sensor N"  
U047F Invalid Data Received From Seatbelt Pretensioner Module "A"  
U0480 Invalid Data Received From Seatbelt Pretensioner Module "B"  
U0481 Invalid Data Received From Automatic Lighting Control Module  
U0482 Invalid Data Received From Headlamp Leveling Control Module  
U0483 Invalid Data Received From Lighting Control Module Front  
U0484 Invalid Data Received From Lighting Control Module Rear "A"  
U0485 Invalid Data Received From Radio  
U0486 Invalid Data Received From Antenna Control Module

U0487 Invalid Data Received From Audio Amplifier "A"  
U0488 Invalid Data Received From Digital Disc Player/Changer Module "A"  
U0489 Invalid Data Received From Digital Disc Player/Changer Module "B"  
U048A Invalid Data Received From Digital Disc Player/Changer Module "C"  
U0491 Invalid Data Received From Digital Disc Player/Changer Module "D"  
U0492 Invalid Data Received From Television  
U0493 Invalid Data Received From Personal Computer  
U0494 Invalid Data Received From "Digital Audio Control Module A"  
U0495 Invalid Data Received From "Digital Audio Control Module B"  
U0496 Invalid Data Received From Subscription Entertainment Receiver Module  
U0497 Invalid Data Received From Entertainment Control Module Rear "A"  
U0498 Invalid Data Received From Telephone Control Module  
U0499 Invalid Data Received From Telematic Control Module  
U049A Invalid Data Received From "Door Control Module A"  
U049B – U04FF שמור רזרבה

U0502 Invalid Data Received From "Door Control Module C"  
U0503 Invalid Data Received From "Door Control Module D"  
U0504 Invalid Data Received From "Door Control Module E"  
U0505 Invalid Data Received From "Door Control Module F"  
U0506 Invalid Data Received From "Door Control Module G"  
U0507 Invalid Data Received From Folding Top Control Module  
U0508 Invalid Data Received From Moveable Roof Control Module  
U0509 Invalid Data Received From "Seat Control Module A"  
U050A Invalid Data Received From "Seat Control Module B"  
U0512 Invalid Data Received From "Seat Control Module D"  
U0513 Invalid Data Received From Yaw Rate Sensor Module  
U0514 Invalid Data Received From Mirror Control Module  
U0515 Invalid Data Received From Remote Function Actuation  
U0516 Invalid Data Received From "Door Switch A"  
U0517 Invalid Data Received From "Door Switch B"  
U0518 Invalid Data Received From "Door Switch C"  
U0519 Invalid Data Received From "Door Switch D"  
U051A Invalid Data Received From "Door Switch E"  
U0521 Invalid Data Received From "Door Switch F"  
U0522 Invalid Data Received From "Door Switch G"  
U0523 Invalid Data Received From "Door Window Motor A"  
U0524 Invalid Data Received From "Door Window Motor B"  
U0525 Invalid Data Received From "Door Window Motor C"  
U0526 Invalid Data Received From "Door Window Motor D"  
U0527 Invalid Data Received From "Door Window Motor E"  
U0528 Invalid Data Received From "Door Window Motor F"  
U0529 Invalid Data Received From "Door Window Motor G"  
U052A Invalid Data Received From Heated Steering Wheel Module  
U0531 Invalid Data Received From Rear Gate Module  
U0532 Invalid Data Received From Rain Sensing Module  
U0533 Invalid Data Received From Side Obstacle Detection Control Module Left  
U0534 Invalid Data Received From Side Obstacle Detection Control Module Right  
U0535 Invalid Data Received From Convenience Recall Module

U0536 Invalid Data Received From Lateral Acceleration Sensor Module  
U0537 Invalid Data Received From Column Lock Module  
U0538 Invalid Data Received From "Digital Audio Control Module C"  
U0539 Invalid Data Received From "Digital Audio Control Module D"  
U053A Invalid Data Received From Entrapment Control Module "A"  
U053B Invalid Data Received From Image Processing Module "A"  
U053C Invalid Data Received From Image Processing Module "B"  
U053D Invalid Data Received From Image Processing Module "C"  
U0541 Invalid Data Received From Entrapment Control Module "B"  
U0542 Invalid Data Received From Headlamp Control Module "A"  
U0543 Invalid Data Received From Headlamp Control Module "B"  
U0544 Invalid Data Received From Parking Assist Control Module "B"  
U0545 Invalid Data Received From Running Board Control Module  
U0546 Invalid Data Received From Entertainment Control Module Front  
U0547 Invalid Data Received From "Seat Control Module E"  
U0548 Invalid Data Received From "Seat Control Module F"  
U0549 Invalid Data Received From Remote Accessory Module  
U054A Invalid Data Received From Entertainment Control Module Rear "B"  
U054B Invalid Data Received From Interior Lighting Control Module  
U0551 Invalid Data Received From Impact Classification System Module  
U0552 Invalid Data Received From Running Board Control Module "B"  
U0553 Invalid Data Received From Lighting Control Module Rear "B"  
U0554 Invalid Data Received From Accessory Protocol Interface Module  
U0555 Invalid Data Received From Remote Start Module  
U0556 Invalid Data Received From Front Display Interface Module  
U0557 Invalid Data Received From Front Controls Interface Module "A"  
U0558 Invalid Data Received From Front Controls/Display Interface Module  
U0559 Invalid Data Received From Radio Transceiver  
U055A Invalid Data Received From Special Purpose Vehicle Control Module "A"  
U055B Invalid Data Received From Special Purpose Vehicle Control Module "B"  
U055C Invalid Data Received From Special Purpose Vehicle Control Module "C"  
U055D Invalid Data Received From Special Purpose Vehicle Control Module "D"  
U055E Invalid Data Received From Front Controls Interface Module "B"  
U0561 Invalid Data Received From Seat Control Switch Module "A"  
U0562 Invalid Data Received From Seat Control Switch Module "B"  
U0563 Invalid Data Received From Audio Amplifier "B"  
U0564 Invalid Data Received From Speech Recognition Module  
U0565 Invalid Data Received From Camera Module Rear  
U0588 Invalid Data Received From Transmission Fluid Pump Module  
U0589 Invalid Data Received From DC to AC Converter Control Module "A"  
U058A Invalid Data Received From DC to AC Converter Control Module "B"  
U0592 Invalid Data Received From Gear Shift Control Module "B"  
U0593 Invalid Data Received From Drive Motor Control Module "B"  
U0594 Invalid Data Received From Hybrid Powertrain Control Module  
U0595 Invalid Data Received From Powertrain Control Monitor Module  
U0596 Invalid Data Received From AC to AC Converter Control Module  
U0597 Invalid Data Received From AC to DC Converter Control Module "A"  
U0598 Invalid Data Received From AC to DC Converter Control Module "B"  
U0599 Invalid Data Received From DC to DC Converter Control Module "A"

U059A Invalid Data Received From DC to DC Converter Control Module "B"  
U059B Invalid Data Received From Hybrid Battery Pack Sensor Module  
U059C Invalid Data Received From Drive Motor Control Module "C"  
U059D Invalid Data Received From Drive Motor Control Module "D"  
U059E Invalid Data Received From NOX Sensor "A"  
U059F Invalid Data Received From NOX Sensor "B"  
U05A0 – U05FF שמור רזרבי

U3000 Control Module  
U3001 Control Module Improper Shutdown  
U3002 Vehicle Identification Number  
U3003 Battery Voltage  
U3004 Accessory Power Relay  
U3005 Retained Accessory Power  
U3006 Control Module Input Power "A"  
U3007 Control Module Input Power "B"  
U3008 Control Module Ground "A"  
U3009 Control Module Ground "B"  
U300A Ignition Switch  
U300B Ignition Input Accessory/On/Start  
U300C Ignition Input Off/On/Start  
U300D Ignition Input On/Start  
U300E Ignition Input On  
U300F Ignition Input Accessory  
U3010 Ignition Input Start  
U3011 Ignition Input Off  
U3012 – U30FF שמור רזרבי